





What is Lock Function?

 
To prevent accidental adjustment, there is a lock option. To lock, press CONFIRM 3 times after finished setting. It only freezes the MODE button, other buttons will still function. To unlock, press CONFIRM 3 times



HOW TO CHECK:

When TIME-R is in operation, press CHECK once, then press right arrow to move to the page of each setting. Press CHECK again to return to current operation

HOW TO CLEAR:





2. Press CONFIRM to erase the setting or CLEAR again to return to the previous setting

HOW TO CHECK CURRENT TIME:

During operation, press CLOCK once to check current time

PRECAUTIOUS:

- 1. Please always keep the timer indoors and in dry place whether it's in operation or not
- 2. Do not use with power extension cords
- 3. Always operate the timer with equipment NOT exceeding the rated current
- 4. Please always check and recharge the battery before using
- 5. Do not open the timer under any circumstances or try to fix it by yourself

RATED CURRENT:

ALWAYS OPERATE THE TIMER WITH EQUIPMENT NOT EXCEEDING THE RATED CURRENT

Rated Current

UK 13A (220 - 240V 50Hz) / AU 10A (220 - 240V 50Hz) / EU 16A (220 - 240V 50Hz) / US 15A (110 - 120V 50Hz)